


Shurflo Pump Changeout

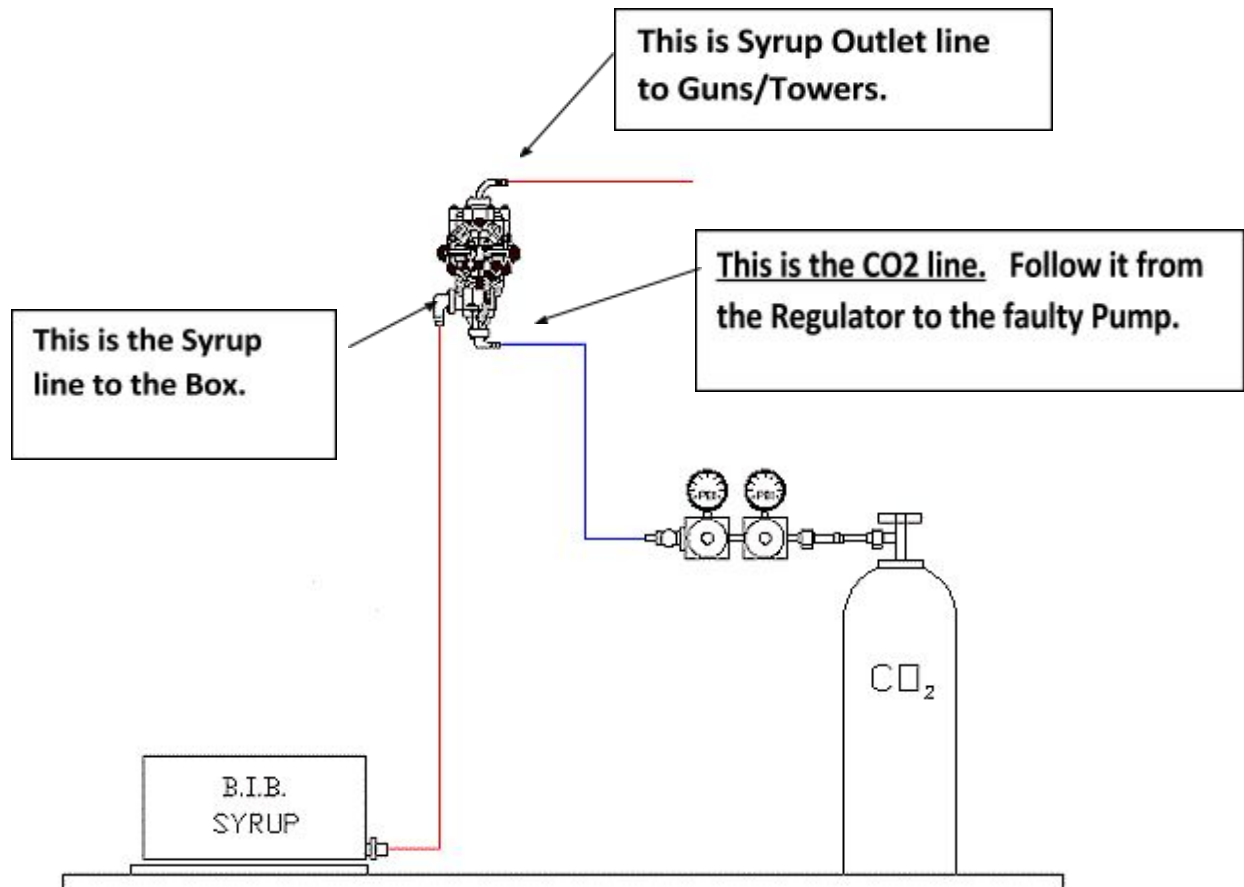

1. Slide back the yellow or black clip that holds the CO2 line in place (shown as Figure 1). Do this you may have to slightly pull the clip apart so that it slides back with ease. The tubing with the fitting intact is now removed. This isolates CO2 to this Pump only.
2. Unscrew the fitting that connects the Box to the adjoining line. Remove box from rack and place opening of box facing upwards if product continues to flow from bag as Diaphragm may be open.
3. Slide back the clip that holds the Syrup line in place (shown as Figure 3). Line with fitting intact is now removed. Without clamping pliers we have, there will be residue of Syrup that will gravity fall under no pressure from this line.
4. Remove Pump from Saddle, reinsert new Pump into Saddle.
5. Most important you follow this procedure in this order.
6. Reinsert Fitting from Figure 2 and slide clip over and ensure fitting is in place and secure.
7. Reinsert Fitting from Figure 3 and slide clip over and ensure fitting is in place and secure.
8. Reinsert Fitting from Figure 1 and slide clip over and ensure fitting is in place and secure.
9. Pump will prime if the previous Pump was faulty.